


# "1/2 Pint" Single Channel AB763 Amplifier

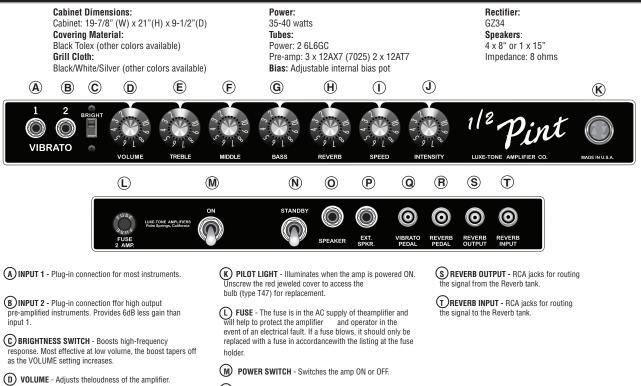

TREBLE - Adjusts the high-frequency tone.

(F) MIDDLE- Adjusts the low-frequency tone.

(G) BASS - Adjusts the mid-frequency tone.

(H) **REVERB** - Adjusts the Reverb level. Reverb can be toggled ON/OFF from the footswitch

UBRATO SPEED - Adjusts the rate of volume variation. Plug in the footswitch, toggle VIBRATO ON to activate .

(J) VIBRATO INTENSITY - Adjusts the depth of volume variation.

STANDBY SWITCH - Use STANDBY instead of switching POWER OFF during short breaks to avoid tube warm-up delay and related tube wear. Use STANDBY for 30 seconds when switching.POWER ON to extend tube life span.

MAIN SPEAKER - Connection for the primary speaker (internal or external). Speakers must always be connected here while operating the unit.

EXTERNAL SPEAKER - Plug in external speakers here. This jack is wired in parallel with the main speaker jack.

(1) VIBRATO PEDAL - Connect the footswitch (included) to activate Vibrato and to enable remote ON/OFF switching.


**(B) REVERB PEDAL** - Connect the footswitch (included) to activate Reverb and to enable remote ON/OFF switching.

### LINE CORD

This amplifier is equipped with a grounding type supply cord to reduce the possibility of shock hazard. DO NOT ALTER THE AC PLUG.

# TUBES

The "1/2 Pint" tube complement consists of one GZ34, two 6L6GC, three12AX7's and two 12AT7's. Looking at the back of the amplifier, left to right, the old tube complement consisted of:

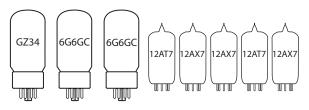

This amplifier is equipt with a internal bias control, when changing to different 6L6 type tubes.

# WARNING: TO REDUCE THE RISK OF FIRE OR Shock Hazard, do not expose amplifier to Rain or moisture!



# **TOLEX COVERING CARE**

The tolex covering is of the same material that was used on the original. It is best cleaned with awater-dampened sponge. Stubborn spots may becleaned with a sponge dampened with a very light soapy solution. Be careful not to let any liquid come in contact with the operating surfaces. DO NOT have the amplifier plugged into the power outlet when cleaning.

### **TROUBLE SHOOTER"S CHECKLIST**

If the amp is set up but does not function, check the following items:

- Is the amp power cord properly plugged into an electrical outlet?
- Is there power at the outlet?
- Is the fuse blown?
- Are the speakers properly connected to the amplifier?
- Is the amp on STANDBY?
- Is the volume control turned up above "two"?
- Is the volume control on the instrument turned up?

 Is your instrument properly plugged into the amplifier? (Eliminate any effect pedals and try another guitar cord.)
If, after checking all the above, the system is still not operating properly, consult Luxe-Tone Amplifiers.